



COMPONENT LIST	
F1	: Fuse
K1	: Tank Heater Contactor
K2-K2A	: Boiler Heater Contactor
P	: Mains Water Solenoid Valve
M1	: Washing Pump
M2	: Rinsing Pump (Opt.)
M3	: Drain Pump
M4	: Detergent Pump (Opt.)
M5	: Rinse Aid Pump (Opt.)
RB1,2,3	: Boiler Resistance
RT	: Washing Tank Resistance
S1	: Door Switch
S2	: Tank NTC Prop
S3	: Boiler NTC Prop
S4	: Water Level
S5	: Boiler Limit Thermostat
S6	: Tank Limit Thermostat